 


# splash

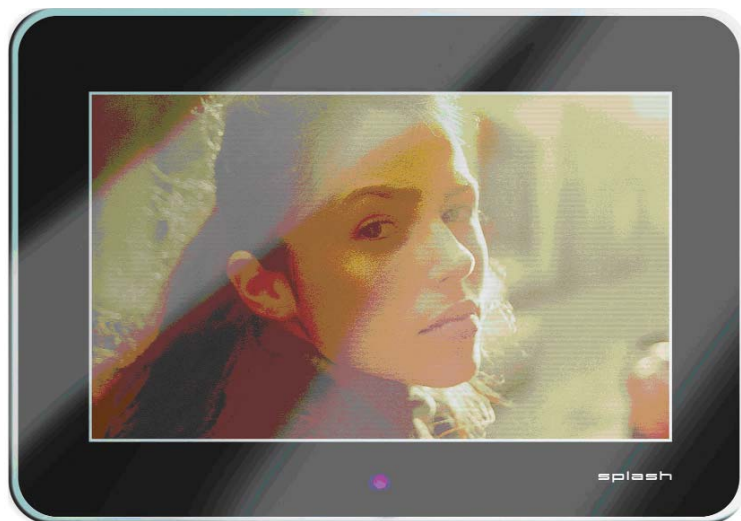

OWNER'S MANUAL  
MODEL: T-WTV/17  
WATERPROOF LCD TV



# splash

Please read Information Manual included together before reading this manual and operating your set. Retain it for future reference.  
Record model number and serial number of the set.

# Contents

Page No.

**Introduction front panel operation**

**3**

**Mode Indicators**

**3**

**Remote Control**

**4**

**Basic Operation**

**5**

**How to adjust the OSD screen**

**6**

**Setting up TV stations**

**7**

**Programme edit**

**8**

**Dynamic Picture Adjustment**

**9**

**Manual Picture adjustment**

**9**

**Picture Adjustment**

**10**

**Sound Adjustment**

**11**

**Sleep Timer**

**11**

 
**Setup Menu**

**12**

**References Troubleshooting Checklist**

**12**

## Introduction front panel operation

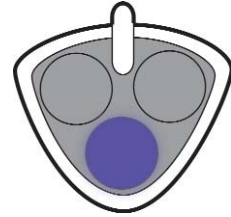

Red to blue on initial turn on

Red flashes to show signal from remote.

## Mode Indicators




Unique touch On/Off Button.

Solid Blue  
=Receiving a signal

Flashing Blue  
=No AV signal



## Remote Control

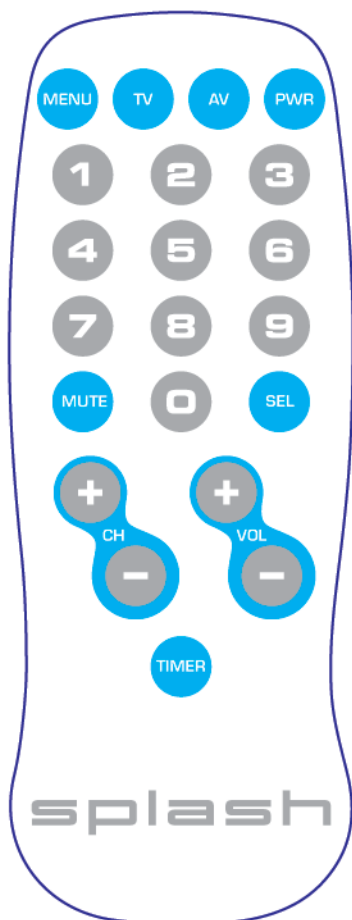

### POWER

Switches the set On from standby or Off to standby.

### AV

Selects: TV, Video, S-video, or PC mode.

### TV

Selects: TV, Direct access.

### MENU

Selects a menu.

### SEL

Accepts your selection or displays the current mode.

### VOL (Volume) + / -

Adjusts the volume.

### MUTE

Switches the sound On or Off.

### CH (Channel) + / -

Selects a Channel.

### 0-9 number buttons


- Selects a Channel.
- Selects numbered items in a menu.

### TIMER

Selects preset sleep times

## Basic Operation

PWR

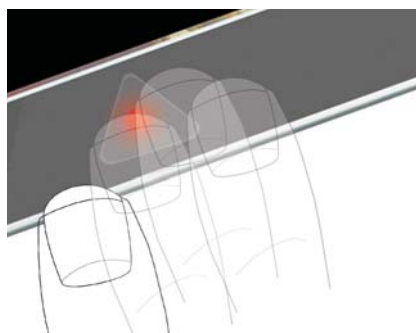

### Turning On/Off the TV

Your Splash TV will already be fully configured to power and signal inputs.

In the standby mode, press the POWER button on the remote control to turn on the TV. Or run your finger slowly over the LED window.


If you want to turn the TV off, press the POWER button located on the remote control. Or run your finger slowly over the LED window. If you intend to be away on vacation, disconnect the power.

### Volume Adjustments

Press the VOL D / E button to adjust the volume.

If you want to switch the sound off, press the MUTE button.

You can cancel this function by pressing the MUTE, VOL D / E.

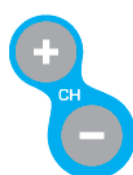

### Programme Selection

Press the CH D / E or NUMBER buttons to select a programme number, must be pre programmed.

### On screen language selection

Press the Menu button and then D / E button to select Language.


Press the Select button and then D / E button to select your desired language.

All the on screen displays will appear in the selected language.

Press the Select button.

Press the Menu button to return to normal TV viewing.

## How to adjust the OSD screen

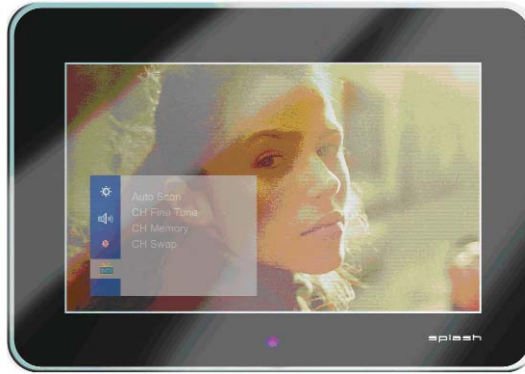


Press the  button and then  button to display each menu.


Press the  button and then  button to select a menu item.

Change the setting of an item in the sub or pull-down  and  button to select a menu item.


You can move to the higher level menu by pressing the  or  button to select a menu item.

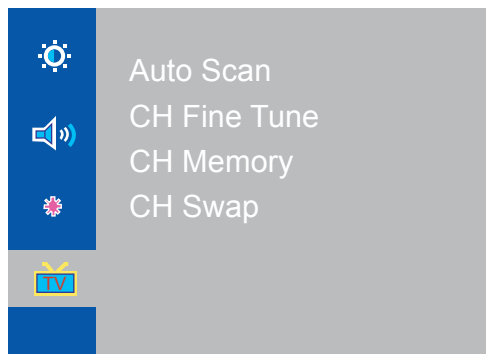

Channel Menu

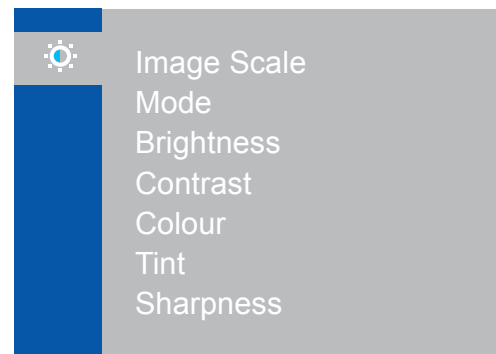

Picture Menu

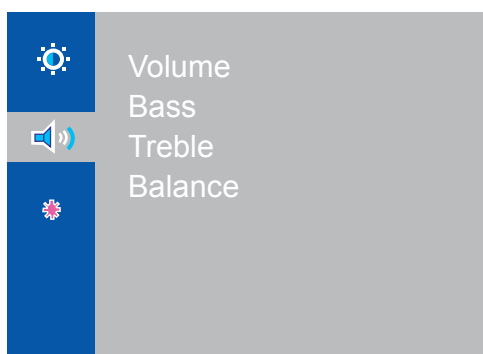


Sound menu





Setup/Time Menu



## Setting up TV stations

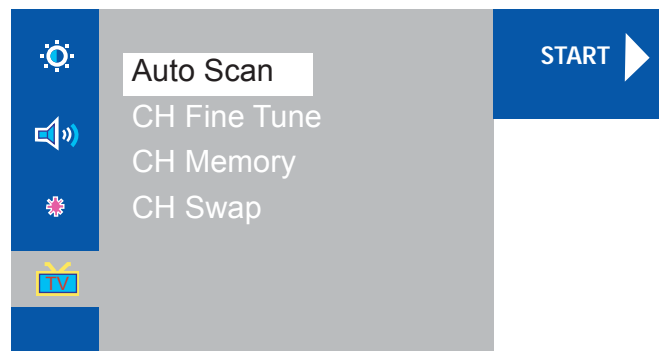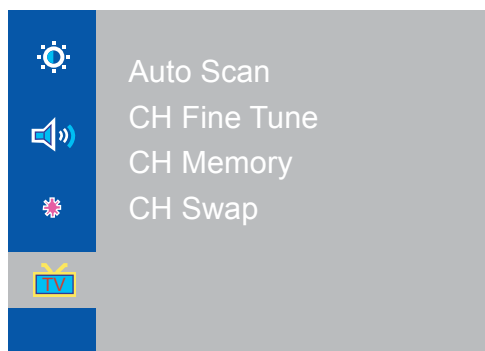

Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the  or NUMBER buttons to scan the stations you have programmed. Stations can be tuned using automatic or manual modes.




### Autoscan - Start



**All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.**

Press the  button and then  button to select the Channel menu.

Press the  button and then  button to select Auto programme.

Press the  button. Select a TV system with the  button and then  button on the System menu;


BG : PAL B/G, SECAM B/G (Europe/East Europe)

I : PAL I/II (U.K./Ireland)

DK : PAL D/K, SECAM D/K (East Europe)

L : SECAM L/L' (France)

M : (USA/Korea/Philippines)

Press the  button to begin auto programming.


All receivable stations are stored. The station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) . If no station name can be assigned to a station, the channel number is assigned and stored as C (V/UHF 01-69) or S (Cable 01-47), followed by a number.

To stop auto programming, press the  button.

When auto programming is completed, the Programme edit menu appears on the screen. See the Programme edit section to edit the stored programme.


Press the menu button to return to normal TV viewing.

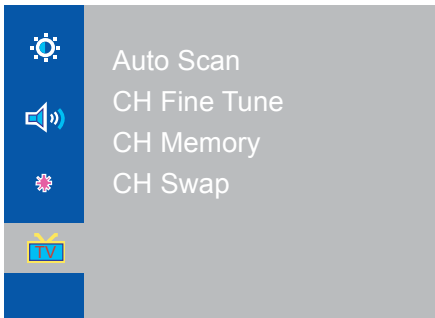

## Programme edit



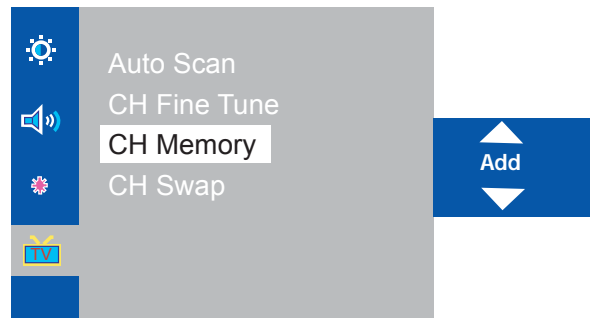

***This function enables you to delete or skip the stored programmes.***

***Also you can move some stations to other programme numbers or insert a blank station data into the selected programme number.***



Press the  button and then  button to select the Channel menu.

Press the  button and then  button to select channel memory.

Press the  button to display the Programme edit menu.

### Deleting a programme


A. Select the programme to be deleted.



B. Open the programme menu as described in 1, 2, 3.



C. Use U/D to select delete and then press .



Repeat this function to delete more channels

### Adding a programme

A. Press menu and then using  button to select the channel menu.

B. Press the  button and the  button to select CH fine tune.


C. Press the  button until desired channel is fine press  button.

D. Repeat steps 1,2 to enter CH memory using  button select ADD. Press. .

### Channel Swap


1. Repeat
2. Select CH Swap
3. Select start
4. Using 1-9 key pad enter numbers to be swapped.
5. Press Select to enter channel.

## Dynamic Picture Adjustment

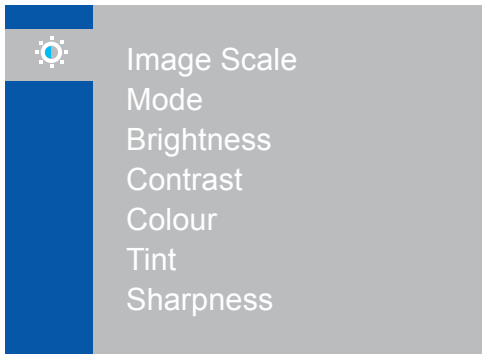



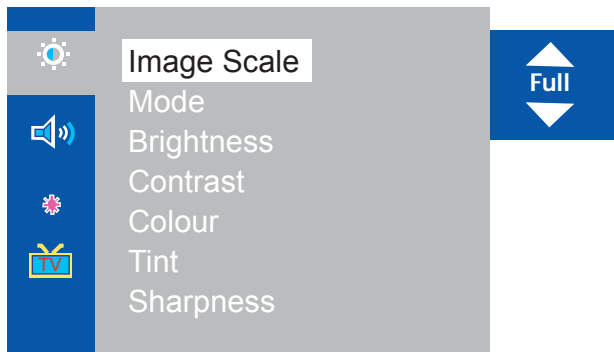

- You can also recall a desired picture (Dynamic, Standard, Soft..)  
The picture Dynamic, Standard, Soft and Game are programmed for optimum picture reproduction at the factory and cannot be changed.


## Manual Picture adjustment



- You can adjust picture contrast, brightness, colour tint, sharpness to the levels you prefer.

Press the  button and then  button to select the Picture menu.



Press the  button to select the desired picture item. Press select. .

Press the  button to make appropriate adjustments.

Press the  button to return to normal TV viewing.

## Picture Adjustment

### Picture format (ARC)

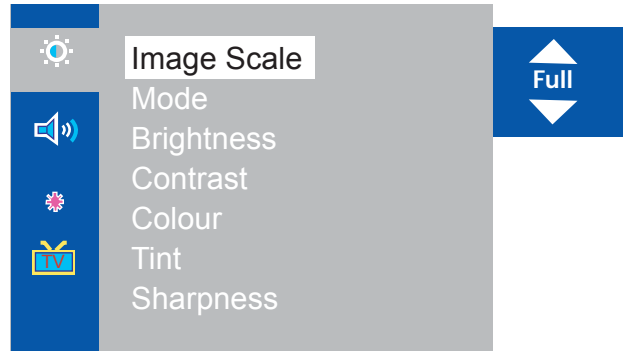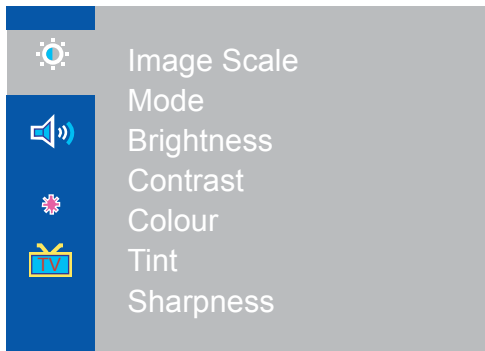

You can watch TV in various picture formats; 16:9, 4:3.







#### 16:9 (Full) Factory Project

You can enjoy the cinema (the picture format of 16:9) or general TV programme through the 4.3 mode.

The screen 16:9 is viewed just like that but the screen 4:3 is magnified to the left and right so that the screen 16:9 is full.


#### 4:3

This picture is 4 to 3 of general TV



1. Press the  button and the  button to select the picture menu.
2. Press the  button to select image scale press the  to select.
3. Use the  to select full or 4:3 then press  to choose disired screen.

 
## Sound Adjustment
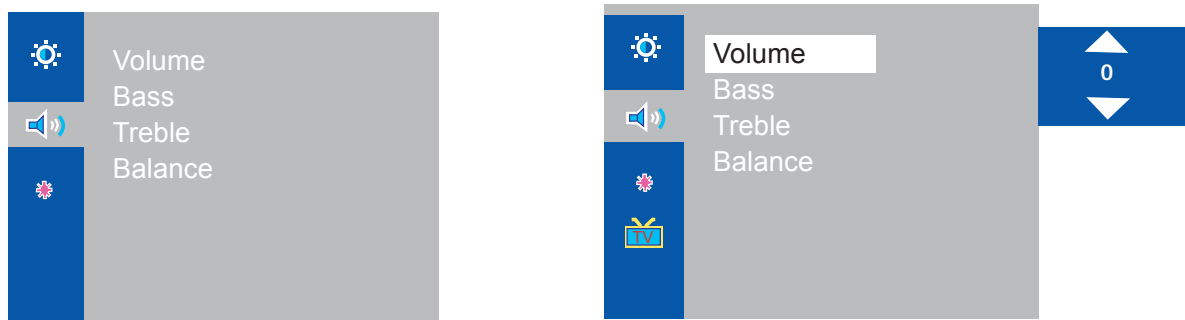
### Equalizer adjustments



Press the  button and then  button to select the Sound menu.

Press the  button and then  button to select the desired sound adjustment.

Press the  button to select the desired setting.

Press the  when desired setting achieved.

Press the SEL button to save.

Press the MENU button to return to normal TV viewing.

## Sleep Timer



Press the TIMER button repeatedly to select the number of minutes. First the off option appears on the screen, followed by the following sleep timer options: 15, 30, 60, 90, 120, 180 minutes.

The timer begins to count down from the number of minutes selected.

To check the remaining minutes before the TV turns off, press the TIMER button once.

To cancel the Sleep Timer, press the SLEEP button repeatedly until off appears.

Sleep timer can also be selected using the Setup/Time menu and selecting Sleep Timer.

## Setup Menu

### Input Source



**- Inputs can be set for TV, AV, DVD or PC mode. AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.**

1. Press **TV** to select the TV mode directly
2. Press **↻** to select, S VIDEO, VIDEO, TV, or PC each button Press will change the input.

## References

### The remote control doesn't work

- Check to see if there is any object between the product and the remote control causing obstruction.
- Are batteries installed with correct polarity (+ to +, - to -)?
- Correct remote operating mode set: TV, VCR etc.?
- Install new batteries.

### Power is suddenly turned off

- Is the sleep timer set?
- Check the power control settings. Power interrupted
- No broadcast on station tuned with Auto off activated.

### If the red light is flashing

- Flash Screen is not receiving signal.
- Please ensure that the source units are switched on